 


OM-36

OMNICHORD SYSTEM ONE OPERATION MANUAL

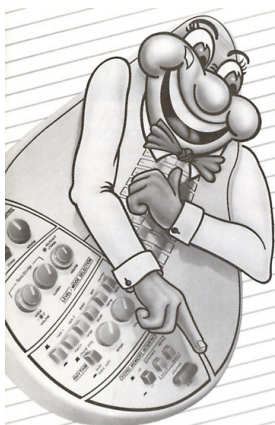

Make Music With Me



**OMNICHORD SYSTEM ONE
OPERATION MANUAL
MODEL OM-36**

Control Position & Function

Original manual page 1

Guitar, organ, piano, bass, drums...all in one!

The all new OMNICHORD SYSTEM ONE by Suzuki makes it possible for you to sound like a pro, even if you've never played before. This electronic musicomputor provides you with the ultimate combination of musical instruments in a lightweight, portable and dynamic sounding package never before available.

Advanced microtechnology allows you to program all the background chords, rhythms, bass and drums to your favorite songs without knowing one note from another. The new Omnichord System One can even be strummed like a guitar to add depth and expression to your music with the amazing SonicStrings Strumplate.

Your pre-selected chord is electronically matched to the 4 octave strumplate so you can actually strum any song's correct chord progression - just like a guitar! All of Omnichord's functions can be used individually or in exciting combinations. There's no end to the music you can make!

This operation manual contains easy-to-follow, step-by-step explanations to all of your Omnichord System One functions. Read them carefully in order to fully utilize the potential of this exciting new instrument. In just a few minutes, you'll be playing guitar, organ, piano, bass and drums all at the same time - imagine the music!

Master Control

1. POWER - Main on/off switch
2. INDICATOR LIGHT - Main unit on/off indicator
3. VOLUME - Master control

Level/Mode Selection

4. CHORD HOLD - Holds chord until next chord is pressed
5. AUTO BASS CHORD/MANUAL CHORD - Play chords (down), add walking bass (up)
6. SONICSTRINGS SUSTAIN - Resonance or decay level
7. SONICSTRINGS VOLUME - Level control
8. CHORD VOLUME - Individual organ volume level

Rhythm and Other Controls

 
9. DRUMS - Selection buttons for 10 different drum patterns
10. TEMPO - Drum and bass speed control
11. VOLUME - Individual drum volume level
12. CHORD BUTTONS - 36 softouch chord buttons
13. SONICSTRINGS STRUMPLATE - 4 octave touch-sensitive chord sequencer
14. SONICSTRINGS OCTAVE INDICATORS

15. INSTANT OFF - Touch anytime to stop all sound
16. OUTPUT - External sound system jack/headphone jack
17. DC12V - Optional A/C adapter jack
18. SPEAKER
19. TUNING ADJUSTMENT - Raise or lower Omnichord pitch to match accompanying instruments
20. SERIAL # PLATE
21. BATTERY DOOR

The all new OMNICHORD SYSTEM ONE by Suzuki makes it possible for you to sound like a pro, even if you've never played before. This electronic musiccomputer provides you with the ultimate combination of musical instruments in a lightweight, portable and dynamic sounding package never before available.

Advanced microtechnology allows you to program all the background chords, rhythms, bass and drums to your favorite songs without knowing one note from another. The new Omnichord System One can even be strummed like a guitar to add depth and expression to your music with the amazing SonicStrings strumplate. Your pre-selected chord is electronically matched to the 4 octave strumplate so you can actually strum any song's correct chord progression—just like a guitar! All of Omnichord's functions can be used individually or in exciting combinations. There's no end to the music you can make!

This operation manual contains easy-to-follow, step-by-step explanations to all of your Omnichord System One functions. Read them carefully in order to fully utilize the potential of this exciting new instrument. In just a few minutes, you'll be playing GUITAR/ORGAN/PIANO-BASS/DRUMS all at the same time—Imagine the music!

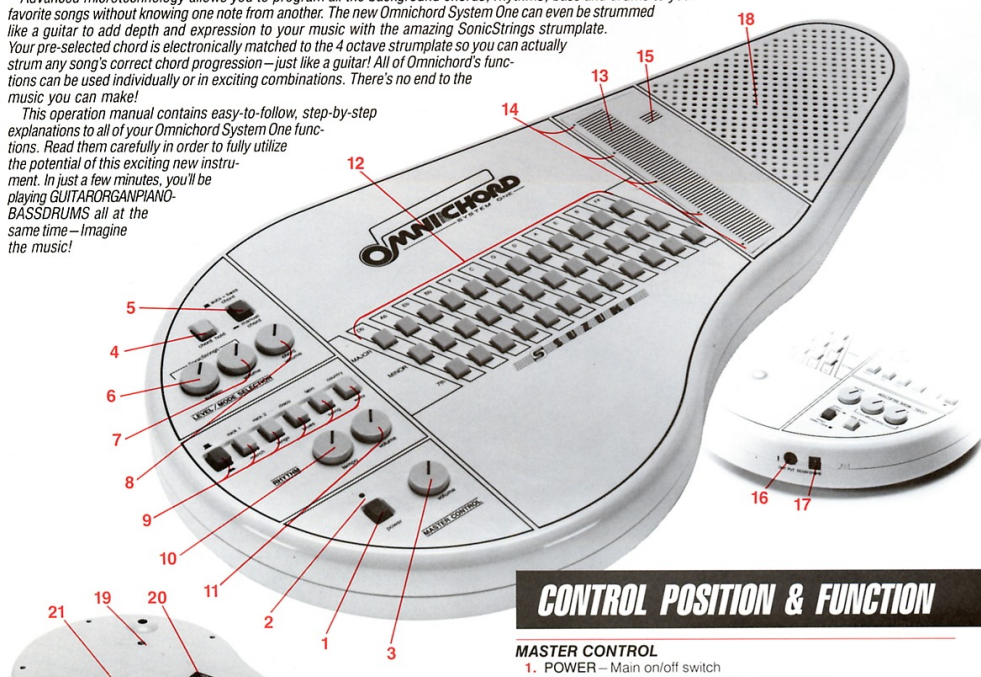

CONTROL POSITION & FUNCTION

MASTER CONTROL

1. POWER—Main on/off switch

2. INDICATOR LIGHT—Main unit self-off indicator

Illustration retained from original manual page 1.

Precautions & Set-Up

Original manual page 2

Dos and don'ts to make your Omnichord last a lifetime

Omnichord System One is a unique musical instrument that allows anyone to make music instantly. This is accomplished by the use of a microprocessor which translates your commands into the language of music. All solid state components have been used in the electronic section of your Omnichord, which is protected by an unbreakable ABS plastic case. With a minimum of care, this product will provide years of dependable operation. Completely portable and always perfectly in tune, Omnichord goes anywhere the fun is. But no matter where you take Omnichord, always observe these important precautions:

No Heat

Never leave your instrument near extreme heat or in the direct rays of the sunlight. Keep away from radiators, heaters or the back window ledge of your car.

No Moisture

Do not use your Omnichord near moisture or place liquids on top of, or near your instrument. If liquid is spilled inside the instrument, it will require extensive repairs.

No Solvents

To clean the cabinet, buttons or touchplate, use a soft, damp cloth. Gently wipe the surface of fingerprints, dust or dirt. Do not use solvents such as benzine or any abrasive cleaners. They will permanently damage the finish.

Turn Your Omnichord Off

When not in use, turn your Omnichord off. This will not only prolong the battery life but reduce wear on all the electronic components.

Long Storage

When storing your Omnichord for long periods of time (30 days or more), it is advisable to remove the batteries entirely and store your Omnichord in a cool, dry place.

Use Only Suzuki Power Adapters

Your Omnichord is designed to operate with batteries (included) or use only the optional A/C or D/C adapters from Suzuki (models OCA-1 and OCD-12); see page 9. The use of any other power adapter can cause serious damage to the electronic components and void your warranty.

Don't Open Your Omnichord

To avoid shock, never open the instrument. If service is needed, contact your Authorized Suzuki Musical Instrument Dealer for repair and parts. Opening the instrument will also void the warranty.

Set-Up

After removing the instrument, batteries and instruction manual from the packing carton and shipping materials, store the box and shipping material for use at a later time. They make an ideal container if it becomes necessary to transport the instrument.

Battery Installation

 
Your Omnichord comes complete with 8 batteries (Size C, SUM-2 or R-14). It is recommended that you use alkaline batteries, not zinc, to avoid battery leakage. Follow these simple instructions to correctly load the instrument with batteries:

- 1 Turn the Omnichord over. Use a small screwdriver or coin to unscrew and remove the battery door.
- 2 Next, to aid battery replacement, place the strap across the battery compartment as shown.
- 3 Insert the 8 included batteries using the diagram on the battery door and re-close the door. If there is no power, re-check to make sure you have correctly inserted the batteries, and replace the battery door.


shipping material for use at a later time. They make an ideal container if it becomes necessary to transport the instrument.

BATTERY INSTALLATION


Your Omnichord comes complete with 8 batteries. (Size C, or SUM-2, or R-14) It is recommended that you use alkaline batteries, not zinc, to avoid battery leakage. Follow these simple instructions to correctly load the instrument with batteries:



 1 Turn the Omnichord over. Use a small screwdriver or coin to unscrew and remove the battery door:

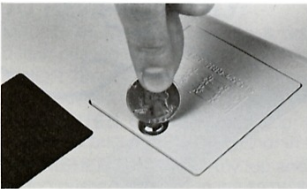

 2 Next, to aid battery replacement, place strap across the battery compartment as shown:

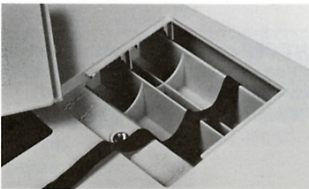

3 Insert the 8 included batteries using the diagram on the battery door and re-close the door. If there is no power, re-check to make sure you have correctly inserted the batteries, and replace the battery door.



Illustration retained from original manual page 2.

Organ - One Finger Chord Play

Original manual page 3

Major, minor and seventh chords

This section explains simple one finger chord play. By using only one finger, you can play major, minor or seventh chords in any key.

 
 
Begin by placing all the control buttons in the UP position. Now set up the Omnichord by following these steps:

- 1 Depress the POWER button to turn on the instrument. The red indicator light will glow.
- 2 Depress the CHORD HOLD button.
- 3 Depress the MANUAL CHORD/AUTO-BASS CHORD button.
- 4 Set the MASTER VOLUME at about 12 o'clock or as desired.
- 5 Set the CHORD VOLUME at about 3 o'clock or as desired.
- 6 Set the RHYTHM VOLUME all the way to the left or off.
- 7 Using your left hand, depress any of the 36 softouch chord buttons and your selected chord will play.
- 8 Omnichord is equipped with an INSTANT OFF control. If you wish to stop the chord sound, touch the INSTANT OFF area. This feature becomes necessary during a pause or at the end of a song. It will immediately shut off the chord sound without having to turn off the instrument. To reactivate the sound, simply push any chord button again.

Note: To accompany yourself with the Omnichord in this mode, simply read the English chord symbols to your favorite song and press the corresponding chord button on the Omnichord. Sing along and change chords as the music continues.

Begin by placing all the control buttons in the **UP** position. Now set-up the Omnichord by following these steps:

- 1** Depress the **POWER** button to turn on the instrument.
The red indicator light will glow.
- 2** Depress **CHORD HOLD** button.
- 3** Depress **MANUAL CHORD/AUTO-BASS CHORD** button.
- 4** Set the **MASTER VOLUME** about 12 o'clock or as desired.
- 5** Set the **CHORD VOLUME** about 3 o'clock or as desired.
- 6** Set the **RHYTHM VOLUME** all the way to the left or off.
- 7** Using your left hand, depress any of the 36 softtouch chord buttons and your selected chord will play.

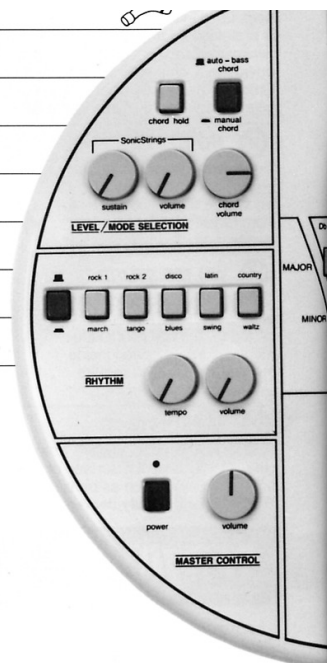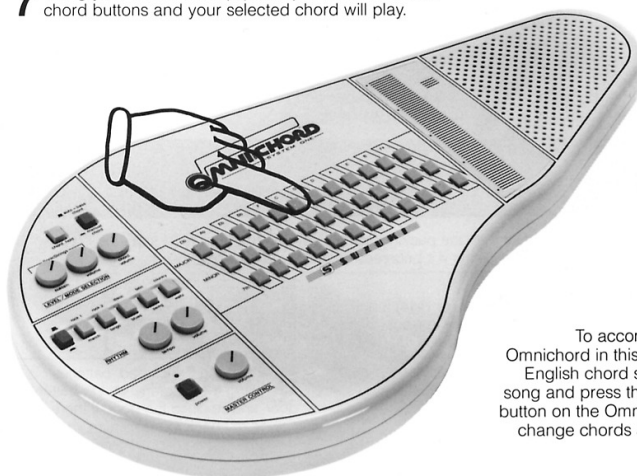

To accompany yourself with the Omnichord in this mode, simply read the English chord symbols to your favorite song and press the corresponding chord button on the Omnichord. Sing along and change chords as the music continues.

- 8** Omnichord is equipped with an **INSTANT OFF** control. If you wish to stop the chord sound, touch the **INSTANT OFF** area. This feature becomes necessary



Illustration retained from original manual page 3.

Organ - Advanced Multiple Finger Chord Play

Original manual page 4

Major seventh, minor seventh, augmented and diminished chords

The chord section of the Omnichord System One is capable of playing more complex chord progressions, including Major 7th, Minor 7th, Augmented and Diminished chords. To play these chords, you will push two or three chord buttons simultaneously. The Omnichord controls are set up exactly the same as described on the previous page. Do not change the settings.

- 1 To play a Major 7th chord, select a key (Db, Ab, Eb, Bb, F, C, G, D, A, E, B or F#). Press the MAJOR and 7th chord buttons together (top and bottom rows). This will produce a Major 7th chord. For example, if your music calls for a Bb Major 7th chord, press the chord buttons shown in the illustration.
- 2 To play a Minor 7th chord, select a key. Press the MINOR and 7th chord buttons together (middle and bottom rows). This will produce a Minor 7th chord. The illustration shows F# Minor 7th.
- 3 To play an augmented chord, select a key. Press the MAJOR, MINOR and 7th chord buttons together (top, middle and bottom rows). This will produce an augmented chord. The illustration shows A augmented.
- 4 To play a diminished chord, select a key. Press the MAJOR and MINOR chord buttons together (top and middle rows). This will produce a diminished chord. The illustration shows G diminished.

To Review Briefly

MAJOR 7th CHORDS: Any top and bottom row chord buttons pushed together in the same key.

MINOR 7th CHORDS: Any middle and bottom row chord buttons pushed together in the same key.

AUGMENTED CHORDS: Any top, middle and bottom row chord buttons pushed together in the same key.

DIMINISHED CHORDS: Any top and middle row chord buttons pushed together in the same key.

Note: These chord combinations together with the one finger play chords will produce 84 different chord combinations so that you can accompany yourself to almost all of your favorite songs in the organ mode. Next, we will learn how to add the guitar, bass and drum patterns to your selected chords.

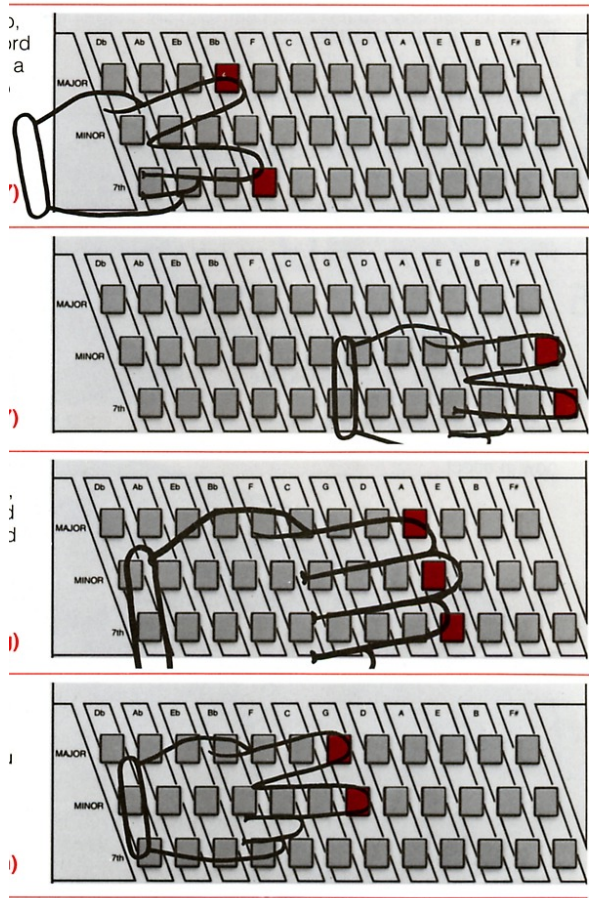 


Illustration retained from original manual page 4.

Guitar - SonicStrings Strumplate

Original manual page 5

SonicStrings Strumplate set-up and play

The Omnichord System One is equipped with a unique feature called a SonicStrings Strumplate. The SonicStrings are electronically charged and therefore respond instantly to the touch of your fingers. The SonicStrings let you actually strum four octaves of your pre-selected chord in perfect pitch without the use of any strings to tune or break! Now you can add depth and true musical expression to every song you play.

To play the Omnichord just like a guitar using the SonicStrings Strumplate, set all the controls as described in the Organ section. Now follow these simple steps:

- 1 Turn the CHORD VOLUME knob all the way to the left or off.
- 2 Set the SONICSTRINGS VOLUME to 3 o'clock or as desired.
- 3 Set the SONICSTRINGS SUSTAIN knob to about 3 o'clock or as desired.
- 4 Press any chord button with your left hand, then strum the SonicStrings Strumplate gently, starting from bottom to top with your right finger or thumb.
- 5 The SUSTAIN control will produce various degrees of lasting resonance or decay of the SonicStrings Strumplate. You can set this control as desired depending on the song you select. Try turning the SUSTAIN control all the way to the left or off. Push a chord button and strum the SonicStrings. A banio-like sound is now in effect.

Please note: Do not use your fingernails or any sharp object on the SonicStrings Strumplate. A slight downward pressure from your fingers is all that is necessary to activate this sensitive area.



**PLEASE
NOTE:**

DO NOT use your fingernails or any sharp object on the SonicStrings Strumplate. A slight downward pressure from your fingers is all that is necessary to activate this sensitive area.

Illustration retained from original manual page 5.

Guitar - Playing Techniques

Original manual page 6

SonicStrings Strumplate

The SonicStrings Strumplate is automatically set up to play the correct chord progression of your pre-selected chord. But just like a guitar, there are many different ways to strum your chord. There is no correct way because you determine what method of play sounds best for each individual song. Here are some interesting effects to try:

Slide Play

Set sustain to 3 o'clock and push a chord button. Then simply run your finger or thumb from the bottom of the strumplate all the way to the top. Now try the same slide but place two fingers on the strumplate at once. Now try three. The more surface area you cover with your fingers, the fuller the chord sound becomes. You can also strum from top to bottom.

 
Thumb stroke / Two finger slide / Split finger slide

Touch Play


Using the ball of your finger, pat the strumplate in four to six places starting at the bottom. Now use two, three, even four fingers as shown. You can hear each octave of the chord as you pat the strumplate.

Touch at octave indicators using one finger / Touch at octave indicators using three fingers / Using two fingers, dance up the strumplate


Note: The SonicStrings Strumplate is one of the unique features that make your Omnichord System One so much fun to play. Experiment for yourself to find other playing possibilities. Most importantly, have a good time!

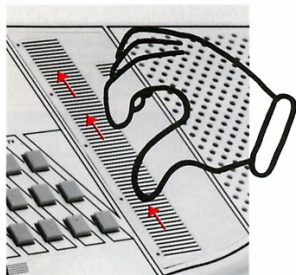

THUMB STROKE

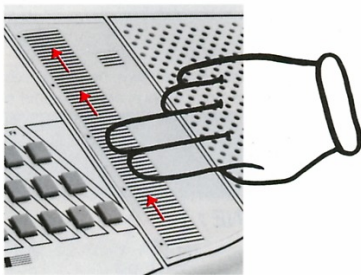 


TWO FINGER SLIDE

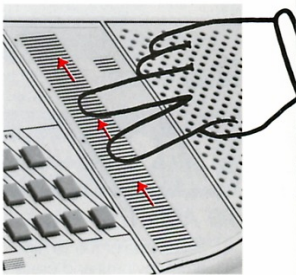 


SPLIT FINGER SLIDE

 
2 TOUCH PLAY – Using the ball of your finger, pat the strumplate in four to six places starting at the bottom. Now use two, three, even four fingers as shown here. Now you can hear each octave of the chord as you pat the strumplate.

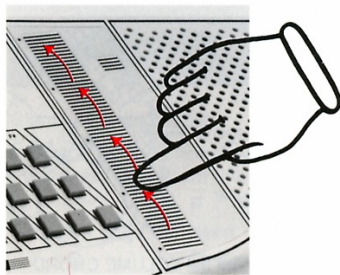

TOUCH AT OCTAVE INDICATORS

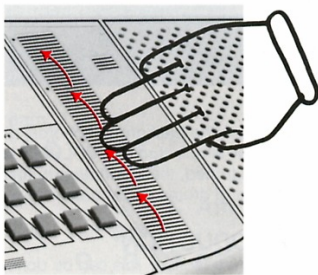 

TOUCH AT OCTAVE INDICATORS

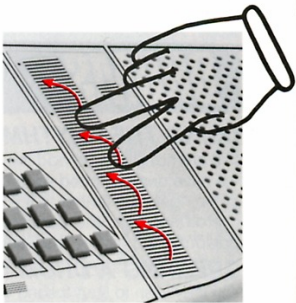 

USING TWO FINGERS,

Illustration retained from original manual page 6.

Combination Play, Bass & Drums

Original manual page 7

Combining all four sections

Combination Play

We have learned how to play the organ or chord section and the guitar section of the Omnichord individually. Now we'll combine the two for a rich, full background sound. Your settings should remain the same as described in the organ section.

To combine organ and guitar sections, turn the CHORD VOLUME knob to about 3 o'clock. Press any chord button and strum the SonicStrings Strumplate.

Try this chord progression: push C Major, then strum; push F Major, then strum; push G Major, then strum; push C Major, then strum.

Remember: Each section, organ and guitar, has its own individual volume controls so you can emphasize either section as desired. The SonicStrings also has a sustain control. Try them all!

Bass - Walking Bass Line

Try all the different rhythms to alter the bass pattern. Turn the TEMPO knob to the right for a faster speed or to the left for a slower speed. Now strum the SonicStrings in time with the walking bass beat!

- 1 Select one of the 10 different drum rhythms and press that button down.
- 2 Place the AUTO-BASS CHORD button in the up position.
- 3 Push a chord button and the walking bass line is automatically added to any chord you choose.

Drums - Using the Rhythm Section

You are now ready to add the drums to complete the background chords, guitar and bass patterns demonstrated so far. To add the drums, turn the VOLUME knob in the Rhythm section to the right. The farther to the right the knob is turned, the louder the drums will sound. Push any chord button and the completed chord, bass and drums accompaniment will play. Add the guitar portion by strumming the SonicStrings.

Creating a Drum-Only Introduction

 
You may wish to start a song with just a drum introduction. This can be done by turning off the CHORD VOLUME knob in the Level/Mode Selection area. Push any chord button, then turn this knob to the left. The SonicStrings Strumplate is still operational. When the song begins, turn the volume knob to the right to bring in the chords and walking bass sections.

Creating a Chord and Drum Introduction

To start a song with only the chords and drums playing, put the AUTO BASS CHORD button in the down position. Push any chord button. You will now hear only your selected chord and the drums. The SonicStrings Strumplate is operational. To bring in the walking bass line, depress the AUTO BASS CHORD button.

TO COMBINE ORGAN AND GUITAR SECTIONS:

Simply turn the CHORD VOLUME knob to about 3 o'clock. Press any chord button (A) and strum the SonicStrings Strumplate (B)

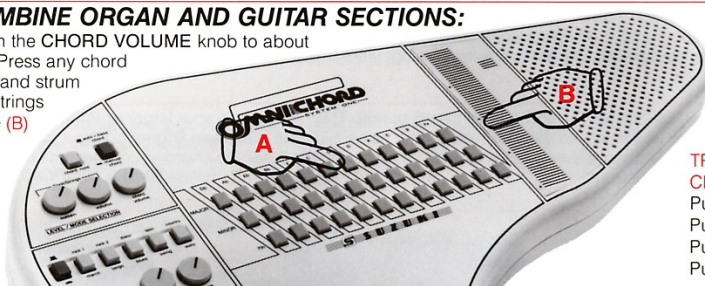**TRY THIS****CHORD PROGRESSION:**

Push C Major – then strum
Push F Major – then strum
Push G major – then strum
Push C major – then strum

REMEMBER: Each section, organ and guitar has its own individual volume controls so you can emphasize either section as desired. Also, the SonicStrings has a sustain control. Try them all!

*Function***BASS WALKING BASS LINE****TO ADD THE WALKING BASS LINE:**

- 1** Select one of the 10 different drum rhythms and press that button down.
- 2** Place the AUTO-BASS CHORD button in the up position.
- 3** Push a chord button and the walking bass line is automatically added to any chord you choose. Try all the different rhythms to alter the bass pattern. Turn the TEMPO knob to the right for a faster speed or to the left for a slower speed. Now strum the SonicStrings in time with the walking bass beat!

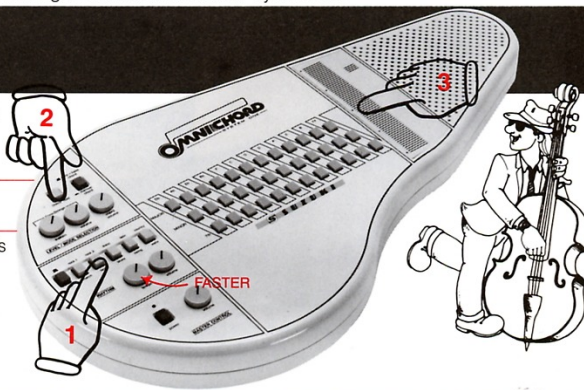 


Illustration retained from original manual page 7.

Demonstration Song

Original manual page 8

Beginning level - a song combining simple functions

To play the following demonstration song, set up the Omnichord by following these simple steps:

- 1 Depress the POWER button in the Master Control section.
- 2 Set the VOLUME in the Master Control section at 3 o'clock.
- 3 Set the SONICSTRINGS VOLUME at 12 o'clock.
- 4 Set the SONICSTRINGS SUSTAIN at 3 o'clock.
- 5 Set the CHORD VOLUME at 3 o'clock.
- 6 Depress the BLUE button and the MARCH button in the Rhythm section.
- 7 Place the AUTO BASS CHORD button in the UP position.
- 8 Depress the CHORD HOLD button.
- 9 Set the RHYTHM TEMPO knob at about 3 o'clock. Increase the speed as desired after you have played the song a few times.
- 10 Set the RHYTHM VOLUME knob at 12 o'clock.

Now you are ready to begin the song. The first chord is C. Push the C chord button in the major or top row. The chord symbol for a major chord is not printed as C MAJOR; it is printed just C. Any time you see a chord without any further designation after it, play a Major chord.

When you push the C chord button, all the background instruments will begin to play. Sing the words to the song as you change chords and strum the SonicStrings Strumplate every time a new chord symbol is written. Every time you press another chord button, the bass pattern and SonicStrings will automatically be programmed to play your selected chord. When the song is over, push the INSTANT OFF area to stop all the sound.

Climb Ev'ry Mountain

From The Sound of Music - words by Oscar Hammerstein II; music by Richard Rodgers

```

C   D7   G           G   Gm   C7       F   F
Climb ev'ry mountain, search high and low.
Fm   Fm   C           C   Dm   G7       C   C
Follow ev'ry byway, ev'ry path you know.
C   D7   G           G   Gm   C   F   F
Climb ev'ry mountain, ford ev'ry stream,
Fm   Fm   C           C   Dm   G7       C   C7
Follow ev'ry rainbow, 'til you find your dream!
F           F   Dm       G7       C   C   Am   D7
A dream that will need all the love you can give.
G           G   Em       A7       D   D   D7   D7
Ev'ry day of your life for as long as you live.
C   A7   D           D   Dm   G7   C       C
Climb ev'ry mountain, ford ev'ry stream.
Am   Am   Dm       Dm   C   C   F   G7   C       Dm   C
Follow ev'ry rainbow 'til you find your dream!

```

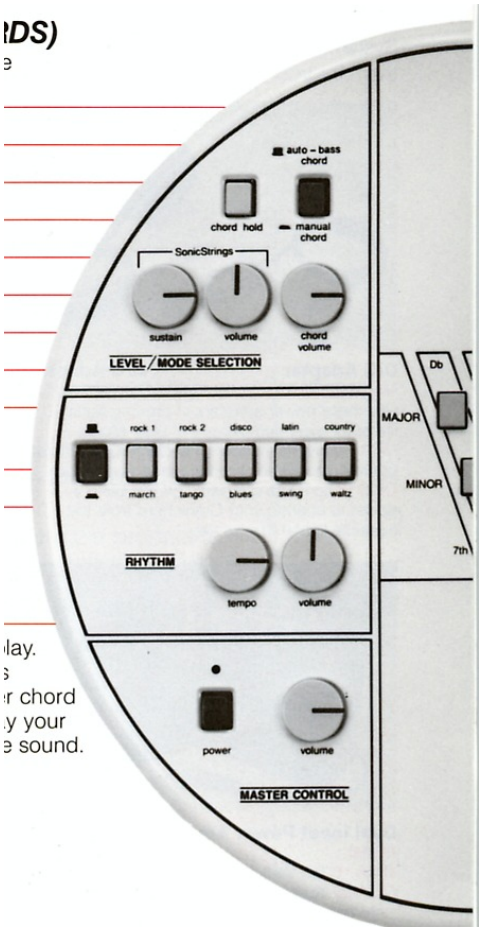 


Illustration retained from original manual page 8.

Accessories

Original manual page 9

Optional playing and convenience accessories for your Omnichord

The accessories listed below were specially designed to enhance the enjoyment of your new Omnichord System One. The historical ordering information is reproduced from the original manual.

Power Adapters

OCD-12 D/C Adapter; OCA-1 A/C Adapter



Use these power adapters to prolong battery life or for extended periods of play. Model OCA-1 converts standard 110V home current to operate your Omnichord at home, and Model OCD-12 converts standard 12V car battery power to operate your Omnichord from the cigarette lighter in your car.

Modular Carrying Case

OMC-2



This carrying case is constructed of unbreakable plastic with enough storage for the A/C adapter and batteries. Fully padded, it is the perfect transport or storage case.

Vinyl Carrying Bag/Shoulder Strap

OVP-2



For the musician on the go, this padded carrying bag is the ideal way to transport your Omnichord.

Dual Input Power Amplifiers

OMA-10; OMA-20; OMM-2 microphone



Turn your Omnichord into the center of attention at concert time. Both Omnichord amps produce rich and full sound quality. Plug two Omnichords and a microphone into either of these powerful amps for dual playing and singing performances.

Headphones

SOP-20



Practice or play in silence with these quality stereo headphones. Plug into the Omnichord and all sound is transmitted through the headphones only.

Songbooks

JFK Just For Kids; EF Enduring Faith; OSH Omnichord Spoken Here



Just For Kids (96 pages) contains children's songs with chord notation, words and melody lines. Enduring Faith (96 pages) collects inspirational, religious and gospel songs arranged for Omnichord. Omnichord Spoken Here (200 pages) contains more than 150 hit songs with words, chord notation and melody lines for easy, intermediate and advanced players.

Concert Performance Stand

MPS-100



Holds your Omnichord at just the right height and angle for practice or performance. Includes a music rack.

Historical ordering information: Original U.S. ordering information: 1-800-854-1594; in California 1-800-542-6252; Suzuki Corporation, P.O. Box 261030, San Diego, California 92126; (619) 566-9710. This information is historical and may no longer be valid.

Warranty

Original manual page 10

The Suzuki Limited Warranty

This product, except the exterior cosmetic parts, is warranted by the Suzuki Corporation to the original purchaser to be free from defects in material and workmanship under normal use, as follows:

- 1 For a period of 90 days from the date of purchase, the Suzuki Corporation will pay the labor charges to repair the defective product. After this 90 day period, you must pay all labor charges.
- 2 In addition, the Suzuki Corporation will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the date of purchase.

In the event repairs are needed, the original purchaser will return the product to an Authorized Suzuki Retail Center with proof of purchase. The dealer will then repair the product or return it to the Suzuki distribution center in San Diego, California for repairs. Upon completion of the repair, the unit will be returned to the dealer freight pre-paid. This warranty will not apply to this product if it has been misused, abused or altered. This warranty is void if the product is opened. Without limiting the foregoing, bending, dropping of unit, or visible cracks and/or scratches are presumed to be defects resulting from misuse or abuse.

Neither this warranty nor any other warranty expressed or implied, including implied warranties of merchantability, shall extend beyond the warranty period. No responsibility is assumed for any incidental or consequential damages.

Note: This warranty is reproduced as historical source material from the original manual and should not be treated as current warranty advice.

Original Contact Details

In the United States: Suzuki Corporation, San Diego Distribution Center, P.O. Box 261030, San Diego, California 92126.

All other countries: Contact the original retailer where the product was purchased for additional warranty details.

THE SUZUKI LIMITED WARRANTY

This product, except the exterior cosmetic parts, is warranted by the Suzuki Corporation to the original purchaser to be free from defects in material and workmanship under normal use, as follows:

1. For a period of 90 days from the date of purchase, the Suzuki Corporation will pay the labor charges to repair the defective product. After this 90 day period, you must pay all labor charges.
2. In addition, the Suzuki Corporation will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the date of purchase.

In the event repairs are needed, the original purchaser will return the product to an Authorized Suzuki Retail Center **with proof of purchase**. The dealer will then repair the product or return to the Suzuki distribution center in San Diego, California for repairs. Upon completion of the repair, the unit will be returned to the dealer freight pre-paid. This warranty will not apply to this product if it has been misused, abused or altered. This warranty is void if the product is opened. Without limiting the foregoing, bending, dropping of unit, or visible cracks and/or scratches are presumed to be defects resulting from misuse or abuse.

Neither this warranty nor any other warranty expressed or implied, including implied warranties of merchantability, shall extend beyond the warranty period. No responsibility is assumed for any incidental or consequential damages.

In the United States Contact: Suzuki Corporation
San Diego Distribution Center, P.O. Box 261030, San Diego, California 92126


All Other Countries Contact: Original retailer where product was purchased for additional warranty details.

Illustration retained from original manual page 10.

OMNICHORD SYSTEM ONE

MODEL OM-36 OPERATION MANUAL

 OMNICHORD SYSTEM ONE MODEL: OM-36 OPERATION MANUAL

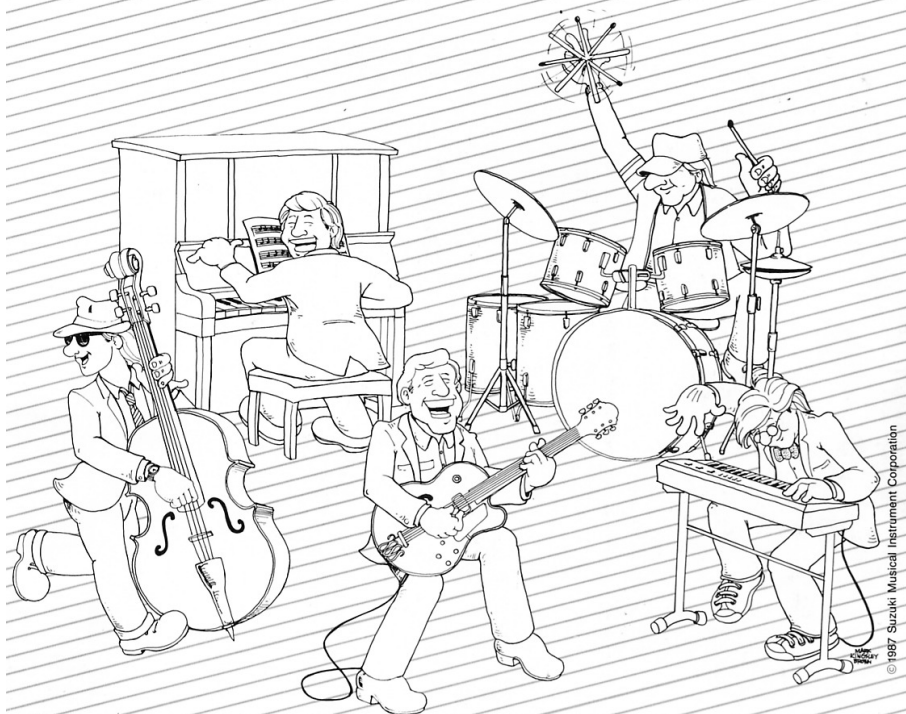

SUZUKI
CORPORATION

SUZUKI MUSICAL INSTRUMENT MANUFACTURING COMPANY, LTD.
HAMAMATSU, JAPAN

PRINTED IN JAPAN