


HAW TO REPLACE TOUCH PLATE OF OM-27

Om-27 has 2 types of Touch plates. Old one was using P.C.B. Touch plate and new one was using normal Touch plate as same as the present one.

1) Old Touch plate:

- A. Take out touch plate.
- B. After took out touch plate, there is glue remained and take off it to be flatness.
- C. Paste metal plate with glue.
- D. Put flat harness in the hole and paste a new Touch plate on the metal plate.
- E. Turn the Omnichord upside down and remove back panel.
- F. Take out old harness and put on new harness to the socket.
The socket has 16 pins but harness has 14 pins. So leaveout 2 pins of socket as following picture.

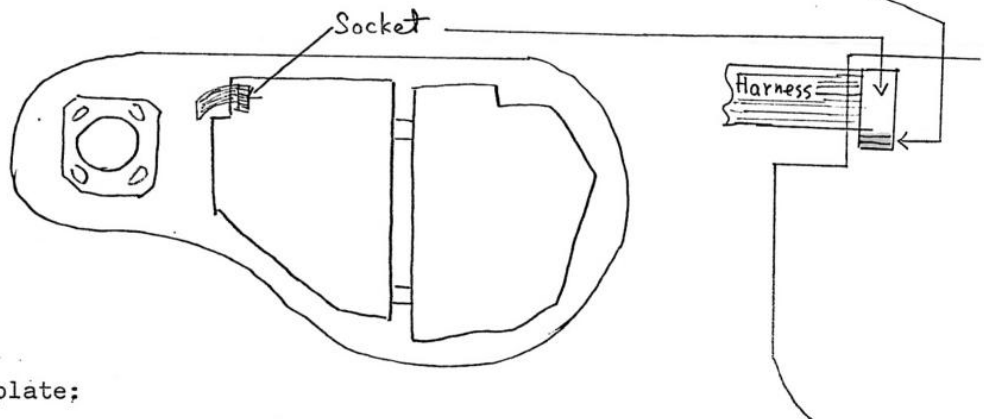

2) New Touch plate;

The method is mostly the same as above and replace as following order;

A - D - E - F